

## Wetroom Waterproofing Specification

### Timber floors (small en-suite)

RIW Tilesafe membrane to be applied, in accordance with the manufacturer's recommendations, to the entire floor area.

RIW Reinforcing Tape to be applied to all wall/wall junctions, soap recesses etc, within the shower area.

RIW FWM to be applied, in accordance with the manufacturer's recommendations, to the walls within the shower area finishing a minimum of 2000mm high and overlapping onto the Reinforcing Tape.

All pipe penetrations to be sealed with RIW Tilesafe Jointing Compound and/or RIW Tilesafe Putty.

For steam rooms FWM should be applied full height to all walls.


### Large timber floors and solid floors

RIW Tilesafe membrane to be applied, in accordance with the manufacturer's recommendations, to the floor area finishing a minimum of 1 metre outside the shower area in all directions. Additional RIW Reinforcing Tape to be applied to all wall/wall junctions, soap recesses etc, within the shower area.

RIW FWM to be applied, in accordance with the manufacturer's recommendations, to the walls within the shower area finishing a minimum of 2000mm high and overlapping onto the Reinforcing Tape.

All pipe penetrations to be sealed with RIW Tilesafe Jointing Compound and/or RIW Tilesafe Putty.

For steam rooms FWM should be applied full height to all walls.

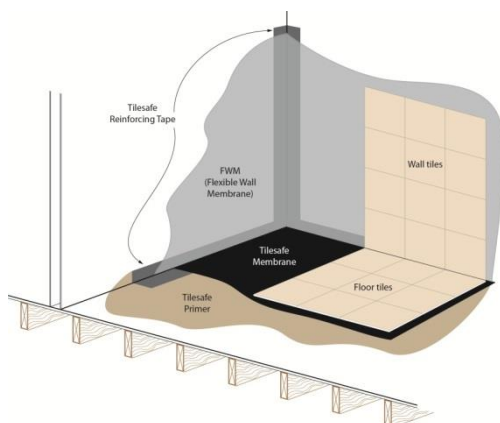

---

#### **Available from:**

CCL Wetrooms  
Lodge Farm  
Hook Road  
North Warnborough  
Hook  
RG29 1HA

T: 0844 3276002  
E: [enquiries@ccl-wetrooms.co.uk](mailto:enquiries@ccl-wetrooms.co.uk)  
W: [www.ccl-wetrooms.co.uk](http://www.ccl-wetrooms.co.uk)

#### **Installation available from:**

Wetrooms UK Ltd  
Lodge Farm  
Hook Road  
North Warnborough  
Hook  
RG29 1HA

T: 0845 0456001  
E: [enquiries@wetroomsuk.co.uk](mailto:enquiries@wetroomsuk.co.uk)  
W: [www.wetroomsuk.co.uk](http://www.wetroomsuk.co.uk)